


# Four Foot Skinny (25.5") Corner Module (approximately to scale)

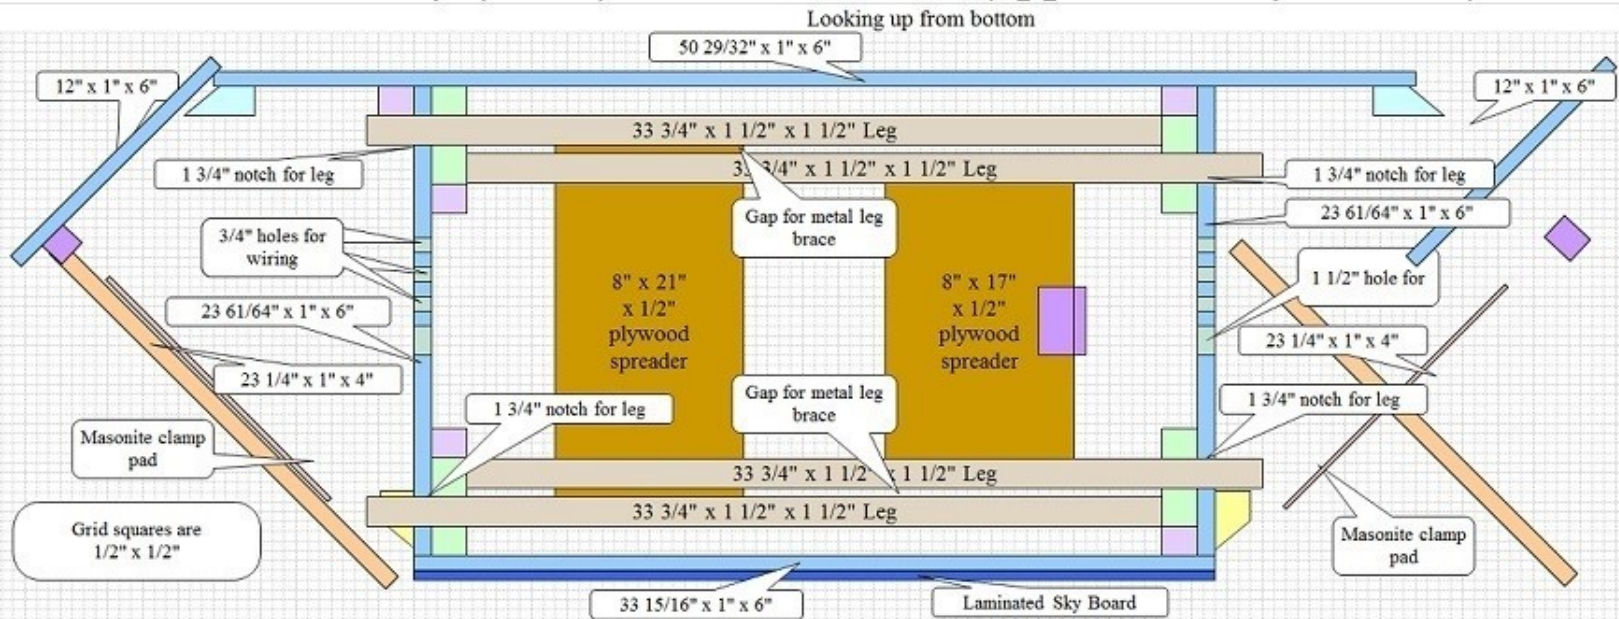

Place six Homosote plugs with their horizontal centerline 3 3/8" above the bottom of the fascia board as follows: One centered on each 12" board and four on the 51" front fascia, one w/ centerline 3" from each end of the board and one with centerline 18" from each end of the board.

Rout out holes for two Digitrax UP-5s, one centered on the front fascia and one centered on the back. The bottom of the UP-5 should be 2" from the bottom of the fascia board. Cut a hole in the skyboard to provide access to the rear UP-5.